

Cathode Lighting Systems Inc. 8020 Queenair Drive Gaithersburg, MD 20879 Ph: (800) 551-5012 Fax: (301) 963-3050 Email: Info@CathodeLightingSystems.com

INSTALLATION MANUAL Model CLSD (Double-Lamp Cathode Light Strip)



For indoor dry, or protected indoor damp location installation only. Operating temperature range: 55° F to 85° F

Pat. 6,454,431

INDEX

- Page 1: Section A: Preparing the luminaire for installation
- Page 2: Section B: Attaching conduit and wiring the luminaire
- Page 3: Section C: Installing more than one luminaire end to end Section D: Mounting the luminaire

Step #1: Remove fixture(s) from packaging container.


- Page 4: Section E: Installing lamps
 - Section F: Removing lamps
 - Section G: Troubleshooting

SECTION A: PREPARING THE FIXTURE FOR WIRING

Please read these instructions carefully before installing this luminaire. You will notice that this luminaire looks different from other fluorescent luminaires, however, it has been designed for easy installation and has been preassembled and tested at the factory.


All luminaires are furnished with dimmable electronic ballasts. Ballasts are dimmable using a 3-wire fluorescent dimmer. Lutron is preferred. Primary wiring for these luminaires must contain three (3) conductors, plus a ground wire.

INSTALLATION OF THIS LUMINAIRE MUST BE PERFORMED BY A LICENCED ELECTRICIAN. ALL INSTALLATION AND WIRING METHODS MUST COMPLY WITH THE NATIONAL ELECTRIC CODE AND ALL APPLICABLE LOCAL CODES.

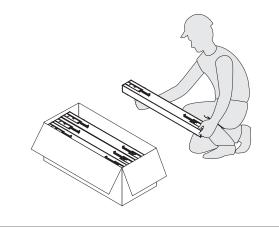


Step #2: Remove the snap-in fixture cover.

Step #3: Remove the covers of the wiring compartments at the ends of the fixture. Please save the screws for reinstallation after wiring is complete.

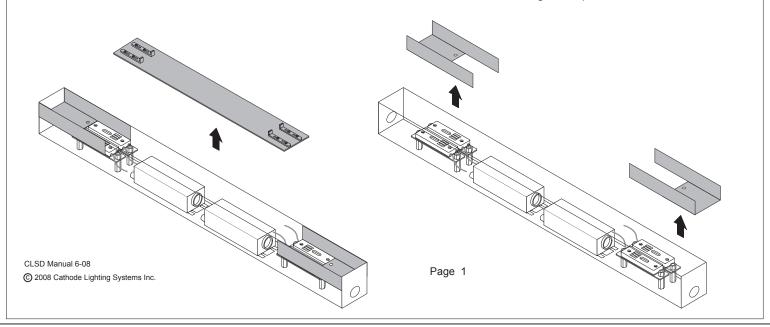

SECTION B: ATTACHING CONDUIT CONNECTOR AND WIRING THE LUMINAIRE


IMPORTANT: CIRCUITS MUST BE DE-ENERGIZED WHEN PERFORMING ANY WIRING / INSTALLATION OPERATION.

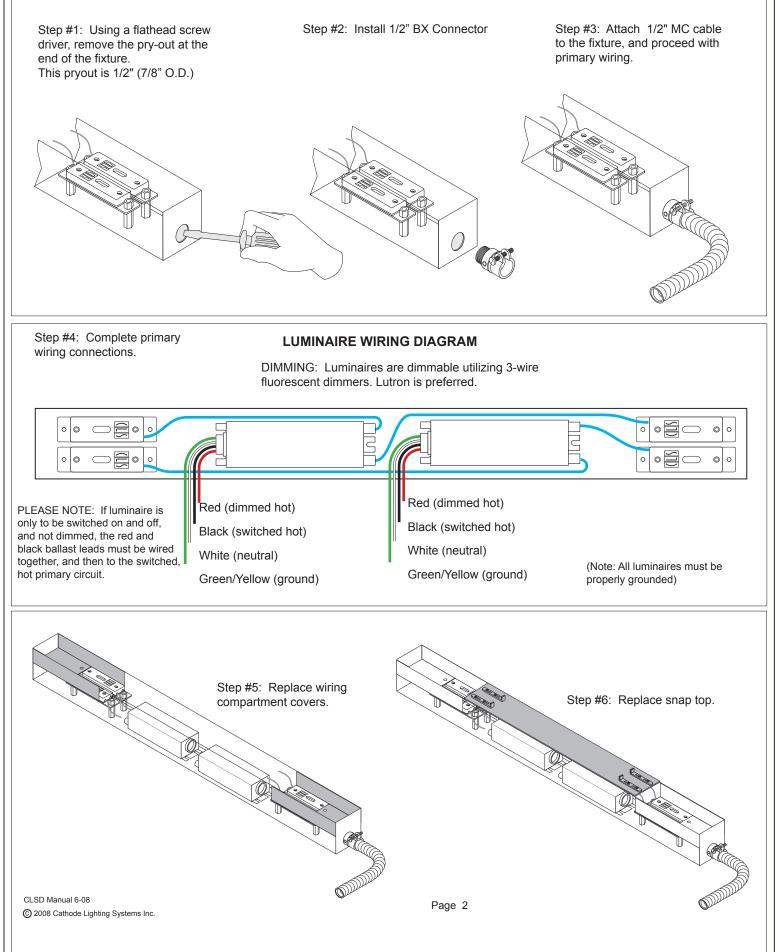

SECTION C: INSTALLING MORE THAN ONE LUMINAIRE END TO END


Step #1: Remove pryouts at each end (refer to section B, step 1), and align luminaires.


Remove wiring compartment covers (refer to section A, step #3).

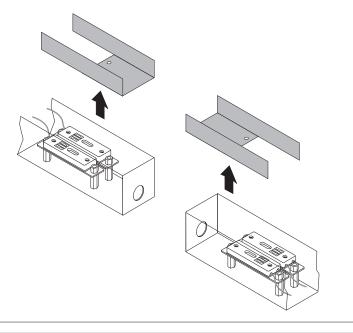

Step #3: Replace wiring compartment covers.

Step #2: Use standard 1/2" galvanized conduit nipple, attach the adjoining luminaires and tighten the 1/2" conduit locknut to the nipple until snug.

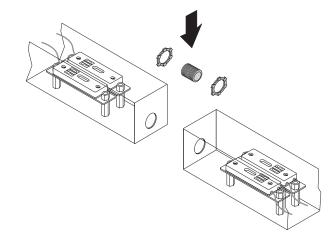


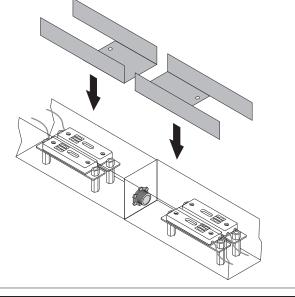

SECTION D: MOUNTING THE LUMINAIRE

STEP #1: Using the appropriate fasteners, and the groove in the interior bottom of the luminaire as a guideline, fasten the luminaire securely to the mounting surface. Fasteners and fastening methods must be capable of supporting the entire weight of the luminaire. Self-drilling screws may be used (diagram I), or a hole may pre-drilled for use with the proper fastener (diagram II).

CLSD Manual 6-08 © 2008 Cathode Lighting Systems Inc.

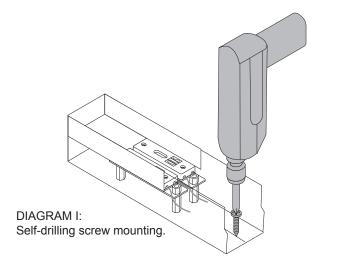

SECTION E: INSTALLING LAMPS

PLEASE NOTE: The lamps and ballasts used in this luminaire are unique, and are not interchangeable with any other manufacturer's lamps or ballasts. Do not attempt to install any other lamp or ballast in this luminaire.


STEP #1: Carefully insert lamp into the lampholders. Handle and install gently, this lamp is more fragile than a standard fluorescent lamp. Make sure each lamp end is making secure electrical contact with the lampholders.


STEP #2: Using a flathead screwdriver, gently slide the "lamp-lock" clips into the lock position. If clip does not slide completely forward into the lamp base, the lamp may not be properly inserted into the lampholders.

SECTION F: REMOVING LAMPS

STEP #1: Using a flat head screwdriver, gently slide the "lamp-lock" clips into the unlocked position.

STEP #2: Carefully remove the lamp. If lamp does not release easily from the lamp bases, a very gentle side-to-side motion is effective in releasing the lamp pins from the lampholder.

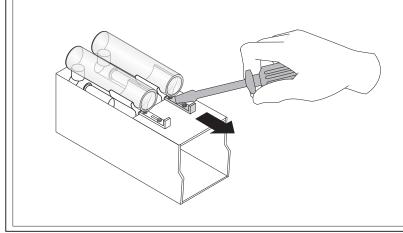

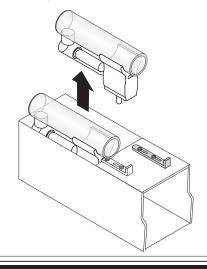

SECTION G: TROUBLESHOOTING

Luminaire will not light.

The ballasts in this luminaire are equiped with integral open-circuit and ground-fault protection. It the luminaire is energized without a lamp in place, the ballast will turn itself off automatically. To reset the ballast, the primary power must be turned off, and then on again. If the luminaire still does not light, the lamp could be inoperable. Contact the factory for further assistance.

Lamp exhibits a rolling or spiraling effect

Turn the luminaire off for five seconds, and then turn off for two seconds. Repeat this procedure 5-10 times. The rolling or spiraling should stop. If the lamp continues to roll or spiral, remove the lamp from the luminaire, wipe it with a clean rag, and reinsert the lamp 180 degrees from its previous orientation. If the lamp continues to appear unstable, contact the factory for further assistance.

Cathode Lighting Systems Inc. 8020 Queenair Drive Gaithersburg, MD 20879 Phone: 800-551-5012 Fax: 301-963-3050 Email: Info@CathodeLightingSystems.com